


Swingarm Pivot Bearing Replacement

Remove the dust seal and the collar (page 13-12).
Remove the right ball bearing using the following tool.

S.Tool


Driver Shaft 07948-MJ00100

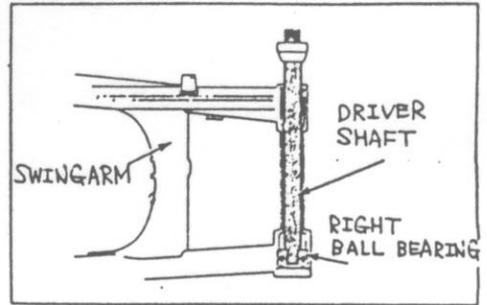

Position the following tool into the left pivot bearing (needle bearing).

S.Tool


Needle Bearing Remover 07GHD-KT70200

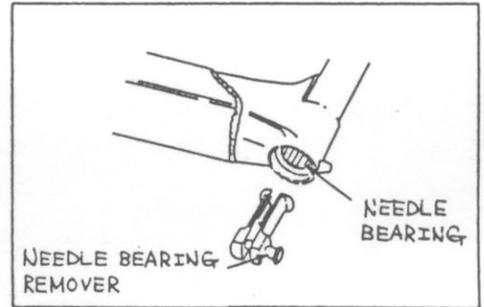

Position the driver shaft as shown and remove the left pivot bearing.

S.Tool

Driver Shaft 07948-MJ00100
Needle Bearing Remover 07GHD-KT70200

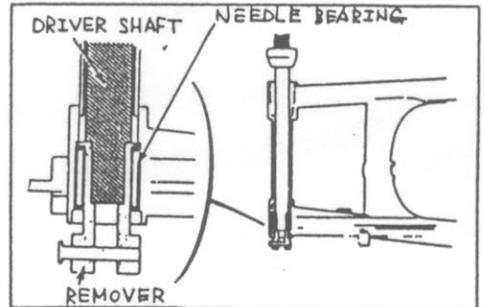

Install the right pivot bearing using the hydraulic press.

S.Tool


Attachment

Outer Driver, 32x35mm 07748-0010100
Pilot, 15mm 07748-0040300
Driver Handle A 07749-0010000

Install the snap ring.

NOTE

- Install the bearing with the manufacturer's name and size code facing out.
- Install the snap ring so that its chamfered edge facing toward the frame(out) side when swingarm installed.

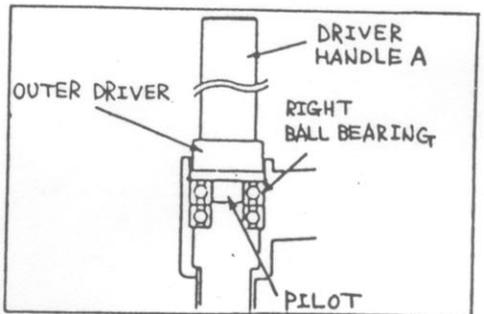

Install the distance collar.