


Air Cleaner Element Replacement

Remove the fuel tank. (page 2-3)
 Remove the air cleaner case cover screws and remove the air cleaner case cover.

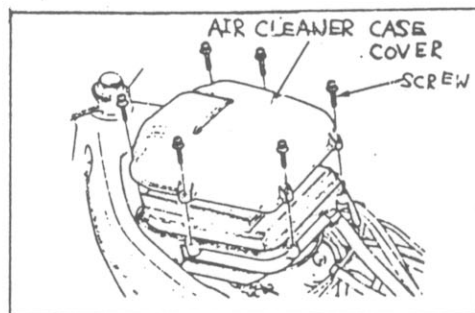


Remove the air cleaner element.
 Replace with the new element in accordance with the maintenance schedule or any time it is excessively dirty or damaged.

NOTE

- This paper element contains a dust adhesive (viscous type). Do not clean the element.

Install the air cleaner element in the reverse order of removal.

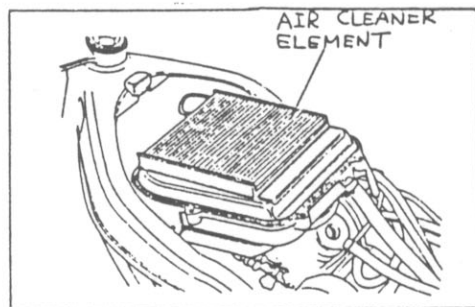

Drive Chain Inspection

WARNING

- Inspecting the drive chain while the engine is running can result in serious hand or finger injury.

Place the motorcycle on its side stand, shift the transmission in neutral.

Check the chain, rollers and pins for wear, damage and excessive free play.

Missing O-rings must be replaced.

Inspect the drive chain free play midway between the sprocket on the lower chain run.

✓ Free Play: 15-25 mm (0.591-0.984 in)
 0.6 - 1.0

CAUTION:

- Do not use steam or high pressure water washing and oiling. These treatments will cause degradation of the O-rings and loss of grease, thus shortening chain life.
- Do not use chain spray containing solvents, or O-rings can be damaged.

