


Front Brake Pad Replacement

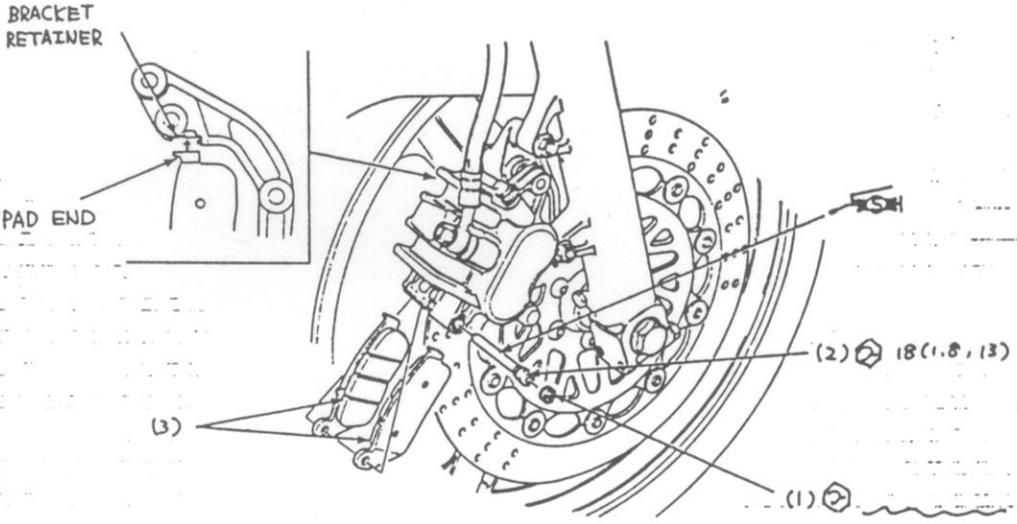

WARNING

- Do not get grease on the brake disc or stopping power will be reduced.
- Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Check the brake system by applying the brake after pad replacement.

NOTE

- Operate the brake lever to seat the calliper pistons against the pads after the pad replacement.
- The brake pad replacement can be serviced without disconnecting the hydraulic system.
- Always replace the brake pads in pairs to assure even disc pressure.

Procedure	Q'ty	Remarks
(1) Removal Order		
(1) Pad pin plug	1	Installation is in the reverse order of removal.
(2) Pad pin	1	At installation: Apply a thin coat silicone grease to the threads.
(3) Front brake pad	2	Position the pad onto the pad retainer securely.

At installation: