


## Cushion connecting rod bearing replacement

Remove the dust seal and the collar.  
Remove the cushion connecting rod needle bearing using the hydraulic press.

 Needle Bearing Remover

07QMD-KT80100

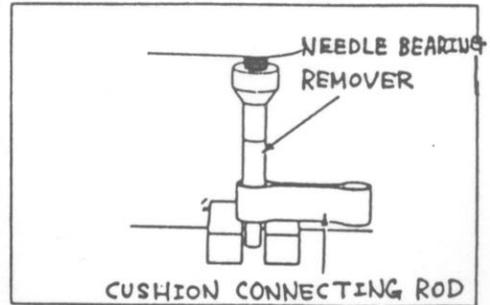


Apply grease to the cushion connecting rod needle bearing, then install the bearing into the cushion connecting rod.

 Driver Handle A  
Outer Driver 24X26mm  
Pilot 17mm

07749-0010000

07748-0010700

07748-0040400

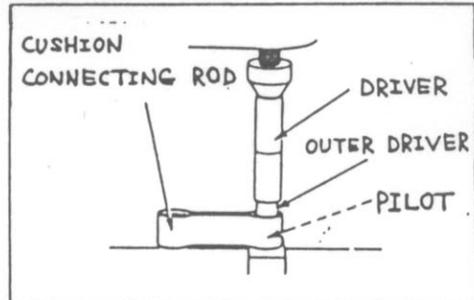

Attachment,