


Headlight Bracket Removal/Installation

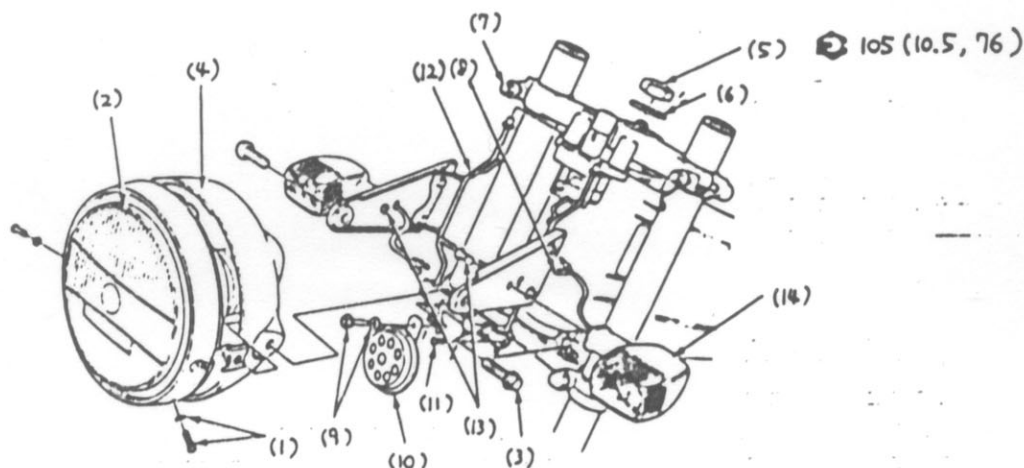

NOTE

- If head light disassembly is necessary, disconnect the connectors in the headlight case. (page 18)
 • Meter removal is not necessary.

Requisite Service

12-2

• Right/Left handlebar removal (page 11-2)

• Headlight aim

Procedure		Q'ty	Remarks
Removal Order			Installation is in the reverse order of removal.
(1)	Headlight bolt/washer	2/2	Disconnect the headlight connector.
(2)	Headlight	2	
(3)	Headlight case mounting bolt	2	Loosen them.
(4)	Headlight case	1	
(5)	Steering stem nut	1	
(6)	Washer	1	
(7)	Top bridge pinch bolt	2	Loosen them.
(8)	Turn signal connector terminal	4	
(9)	Bolt/washer	1/1	
(10)	Horn	1	
(11)	Screw	1	
(12)	Headlight bracket	1	
(13)	Turn signal mounting bolt	2	
(14)	Turn signal light	2	