


## Swingarm Disassembly/Assembly

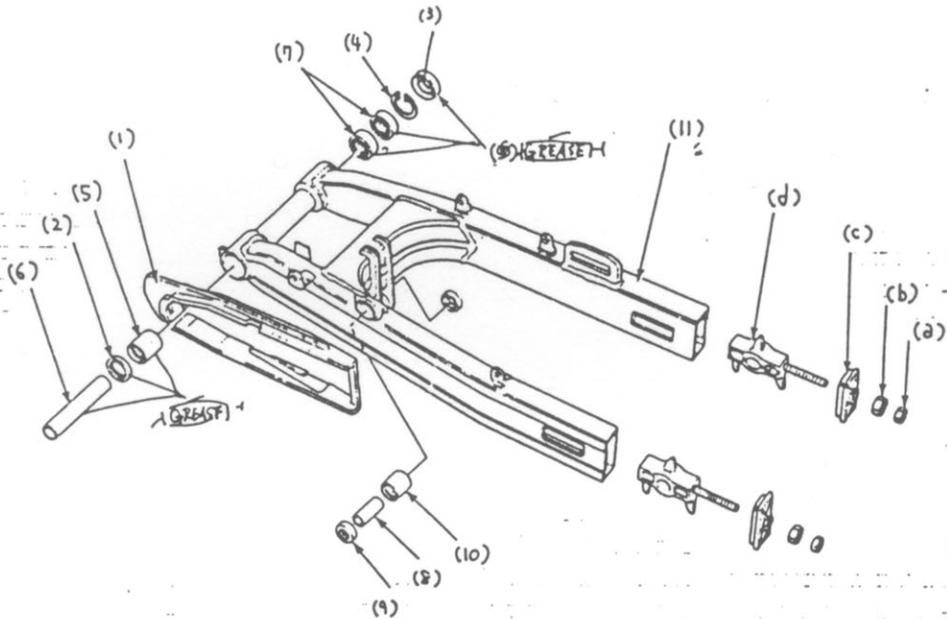

Requisite Service *13-12*  
 • Swingarm removal (page *12-12*)

Procedure	Q'ty	Remarks
(1) Disassembly Order		Assembly is in the reverse order of the disassembly.
(2) Chain slider	1	At installation: put into the stopper (inside the swingarm) securely.
(3) Left swingarm dust seal	1	
(4) Right swingarm dust seal	1	
(5) Snap ring	1	
(6) Needle bearing	1	Replacement (page <i>13-16</i> )
(7) Distance collar	1	
(8) Ball bearing	2	Replacement (page <i>13-16</i> )
(9) Shock arm collar	1	
(10) Dust seal	2	
(11) Needle bearing	1	Replacement (page <i>13-17</i> )
(12) Swingarm	1	Replacement (page <i>12-17</i> )
(a) Drive chain adjusting nut	1	
(b) Drive chain lock nut	1	
(c) Adjuster plate	1	
(d) Adjuster	1	