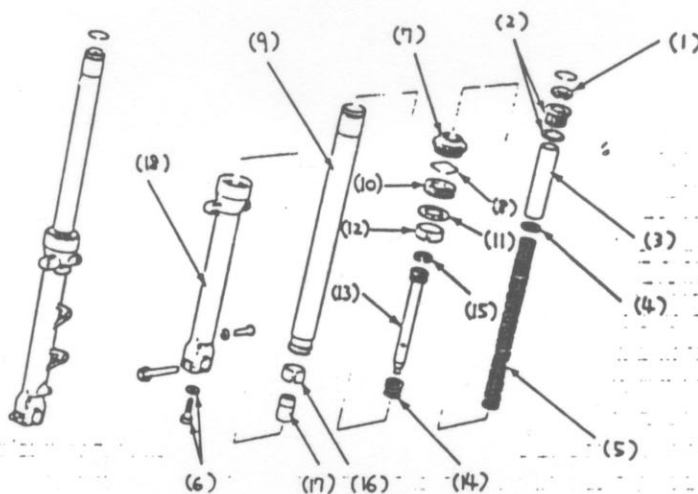


Fork Disassembly

**WARNING**

• The fork tube cap is under spring pressure. Use care when removing it and wear eye and face protection.

NOTE

• Temporarily install the fork spring and fork cap bolt to loosen the socket bolt.

Requisite Service 12-10

• Fork removal (page 11-8)

Procedure		Q'ty	Remarks
(1)	Disassembly Order	1	
(2)	Fork bolt cap	1/1	Loosen the bolt before removing from the fork leg. Pour out the fork oil after the fork spring removal.
(3)	Fork cap bolt/O-ring	1	
(4)	Spacer	1	
(5)	Spring seat	1	
(6)	Spring	1	Do not scratch the fork tube sliding surface.
(7)	Fork socket bolt/washer	1/1	
(8)	Dust seal	1	
(9)	Stop ring	1	
(10)	Fork pipe assembly	1	Remove the fork pipe from the fork slider.
(11)	Oil seal	1	
(12)	Buck-up ring	1	
(13)	Slider bushing	1	
(14)	Fork piston	1	Remove from the fork pipe.
(15)	Rebound spring	1	Remove from the fork piston.
(16)	Piston seal	1	
(17)	Fork pipe bushing	1	Do not remove the bushing, unless it is necessary to replace with a new one.
(18)	Oil lock piece	1	
	Fork slider	1	