


# Meter Disassembly

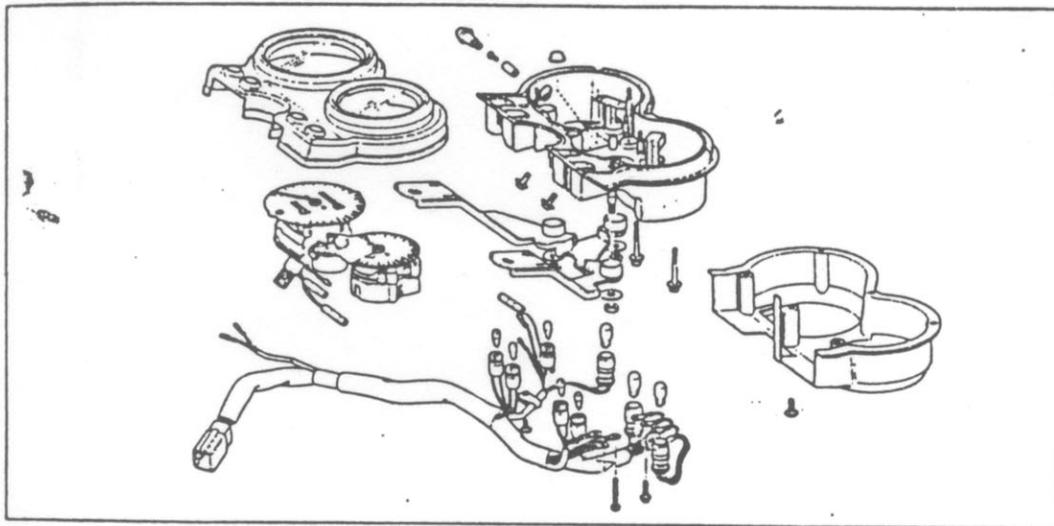

**CAUTION:**

Do not disassemble the meter further.

**NOTE:**

Assembly is in the reverse order of disassembly.

## Ignition Main Switch Disassembly

Remove the <sup>Ignition</sup> ~~main~~ switch (page 18-3).  
Position the key at the specified position.

Specified Position: ON or OFF position

Remove the contact base from the ignition switch by removing the the screws as shown.

Assembly is in the reverse order of disassembly.

