



Pad Wear Inspection

Check the front brake pads for wear.
Replace pads as a set if worn to the brake pad wear limit groove.

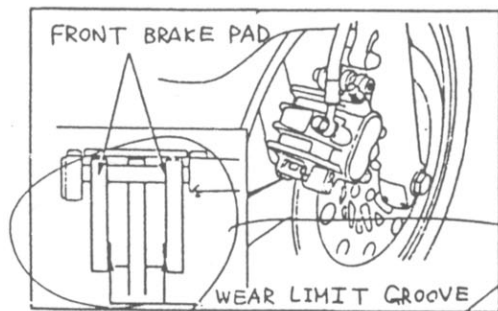

Check the rear brake pads for wear.
Replace pads as a set if worn to the brake pad wear limit groove.

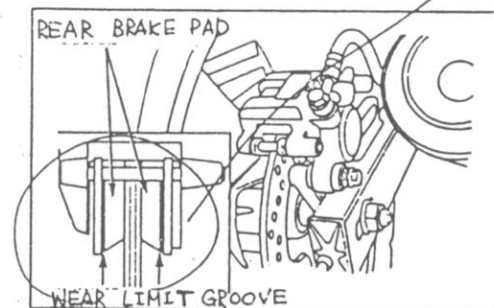

Side Stand Inspection

Check the wear of the side stand rubber.
Replace the rubber with the new one if worn to the wear limit mark.

Inspect the side stand motion.

The side stand should lower easily to its first stop, then lock after moving farther forward to support the motorcycle as the rubber touches the ground.

When the motorcycle is lifted upright, the stand should automatically move to the first position, and retract when kicked up.



If the side stand does not move freely, disassemble it for inspection as follows:

- Remove the return spring at the retracted position.
- Remove the pivot bolt and disassemble the side stand.
- Check the pivot inner surface, pivot collar and the pivot dust seals for wear or damage.

After inspection, apply grease to the pivot parts and reassemble the side stand.

NOTE

- Install the dust seal with its spring side facing out.
- Make sure that the dust seal spring is seated properly before installing the side stand.

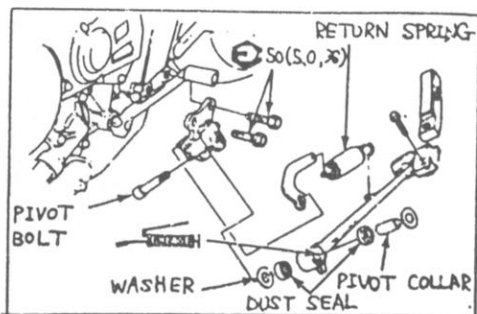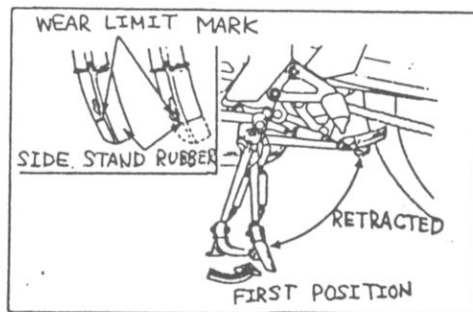

Recheck the side stand movement.