


Starter Motor Removal/Installation

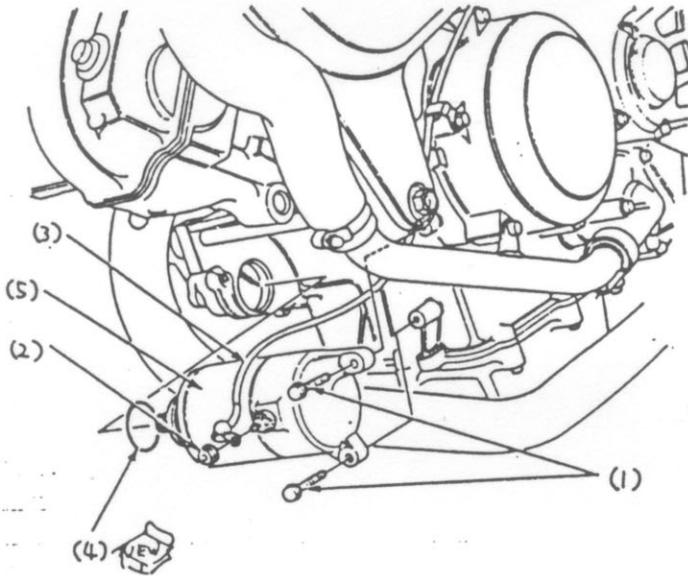

WARNING

• Do not service the starter motor while the exhaust pipe is hot.

Procedure		Q'ty	Remarks
(1)	Removal Order		Installation is in the reverse order of removal.
	Starter motor mounting bolt	2	
(2)	Motor cable nut	1	
(3)	Motor cable	1	
(4)	Starter motor	1	
(5)	O-ring	1	