


# Meter/Main Switch Removal/Installation

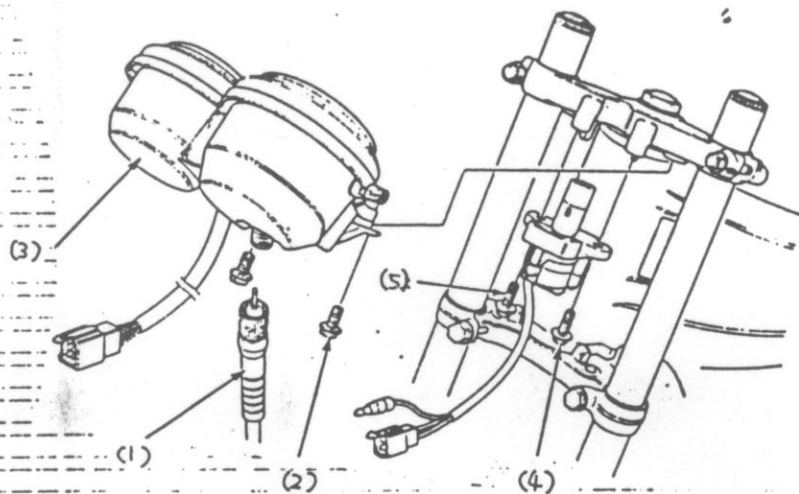

## Requisite Service

• Headlight bracket removal (page 11-6)

• Disconnect the meter/main switch connectors.   
 Ignition

Procedure	Q'ty	Remarks
(1) Meter Removal Order (2) Speedometer cable (3) Meter mounting bolt Meter assembly	1 2 1	Installation is in the reverse order of removal.
(4) Main Switch Removal (5) Main-switch mounting bolt Main switch	2 1	

Ignition