

## Engine Oil


### Oil Level Inspection

Place the motorcycle on its center stand.  
Run the engine and allow to idle for 2-3 minutes.  
Check the oil level at the engine oil inspection window.


#### NOTE

• Turn the wiper to see the oil level more easily.

If the oil level is below the lower level mark on the inspection window, add the recommended oil up to the upper level mark.

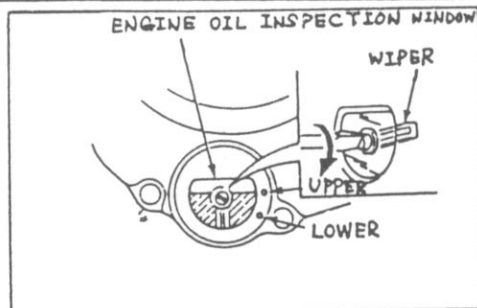

### Recommended Engine Oil:

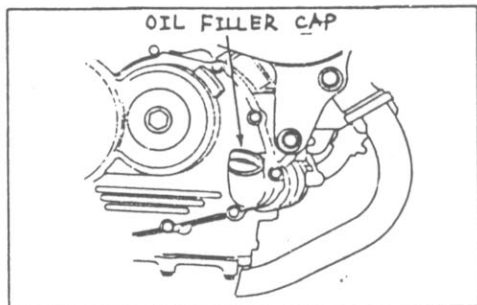


### Oil Filter Replacement

Change Interval: first time only  
after

1,000 KM  
10,000 km -  
12,000 km

Remove the engine oil drain bolt and drain the engine oil.  
Remove the oil filter cover bolt and remove the oil filter cover.

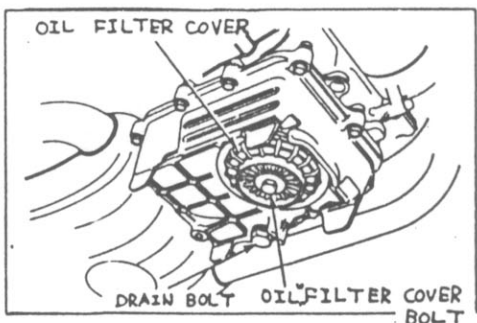


Remove the O-ring from the oil filter cover.  
Install the new O-ring.  
Install the relief spring and the new oil filter, then  
install the oil filter cover.  
Tighten the oil filter cover bolt.

Torque: 18 N·m (1.8kg-m, 13ft-lb)

#### NOTE

• Make sure that the washer and relief spring is installed properly.

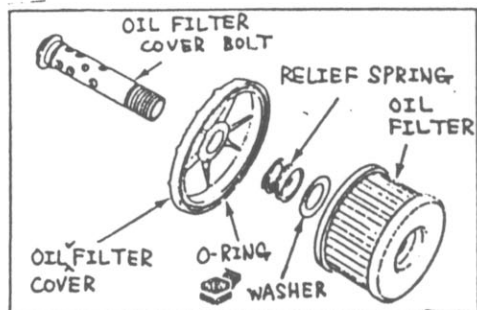

Fill the crankcase with the recommended engine oil.  
Make sure there are no oil leaks, then check the oil level.