

Install the left pivot bearing (needle bearing) using the hydraulic press.

S.1001

Attachment

Outer Driver, 28X30mm


Pilot, 22mm

Driver Handle A

07948-1870100

07748-0041000

07749-0010000

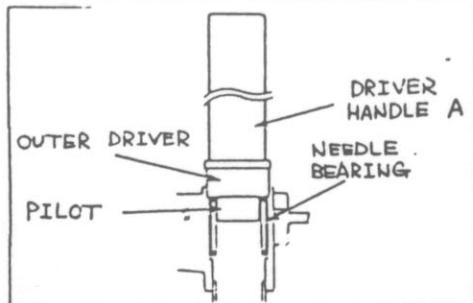

### Cushion Arm (Swing Arm: Cushion Arm Side) Bearing Replacement


Remove the dust seal collar.

Remove the cushion arm needle bearing from the swingarm using the hydraulic press.

S.1001

Needle Bearing Remover

07GMD-KT80100

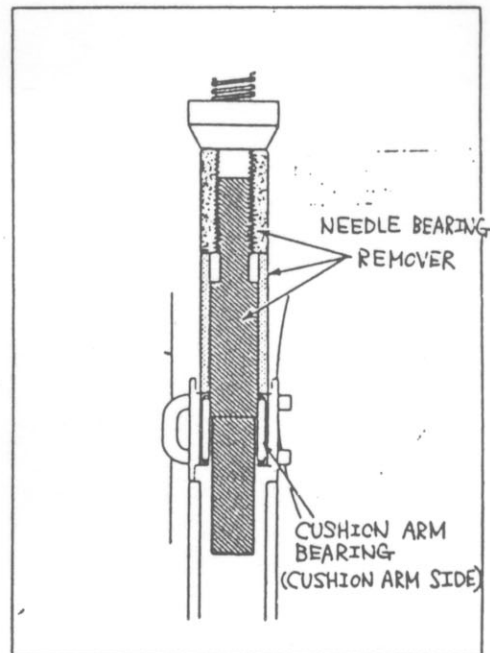

Apply grease to the new cushion arm needle bearing and install into the swingarm.

S.1001

Attachment

Outer Driver, 24X26mm

Pilot, 17mm

Driver Handle A

07748-0010700

07748-0040400

07749-0010000

