

## Cam Chain Tensioner Slipper/ Cam Chain Tensioner Inspection


Inspect the cam chain tensioner slipper and replace the worn or damaged slipper.

Turn the tensioner body upside down and drain the oil from the oil chamber.

Drain the oil from the plunger by moving the tensioner arm slowly.

Check the spring tension while moving the tensioner arm.

Replace the tensioner body if necessary.

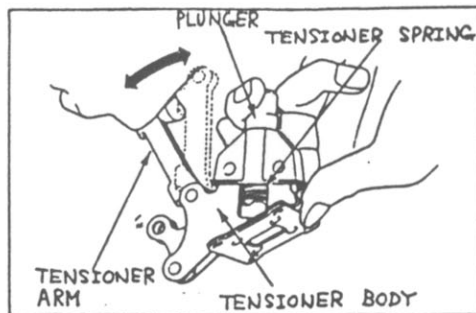

Fill the oil chamber with oil.

Pump oil into the plunger by moving the tensioner arm slowly.

The tensioner is good if the arm locks when you try to move it quickly.

After inspection, drain the oil from the plunger.

