


Maintenance

Use the camshaft lifter to obtain the correct valve clearance.

S.100L
Camshaft Lifter

07G4G-KV00100

NOTE

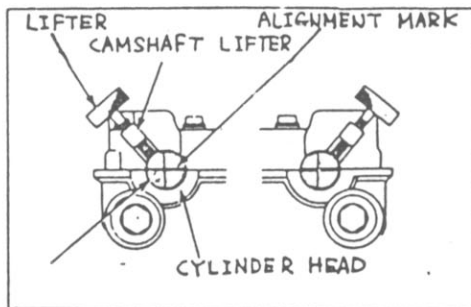

After installing the camshaft lifter, loosen the lock nut using the valve wrench, then loosen the valve adjusting screw using the valve adjust wrench.

Valve Clearance: IN/EX : 0.15-0.18²⁰ (0.006-0.007⁵⁰⁸ in)

S.100L
Valve Adjust Wrench

07708-0030300

S.100L
Valve Wrench

07708-0030100

NOTE

- Recheck the valve clearance after tightening the lock nut.

Measure and adjust the rear cylinder IN and EX valve clearance.

Turn the crankshaft 450° clockwise (from the clutch side) and align the "T2" mark and the alignment mark at the timing hole.

Measure and adjust the front cylinder IN and EX valve clearance using the camshaft lifter.

After adjustment, install the removed parts in the reverse order of removal.

