


Front Wheel Disassembly/Assembly

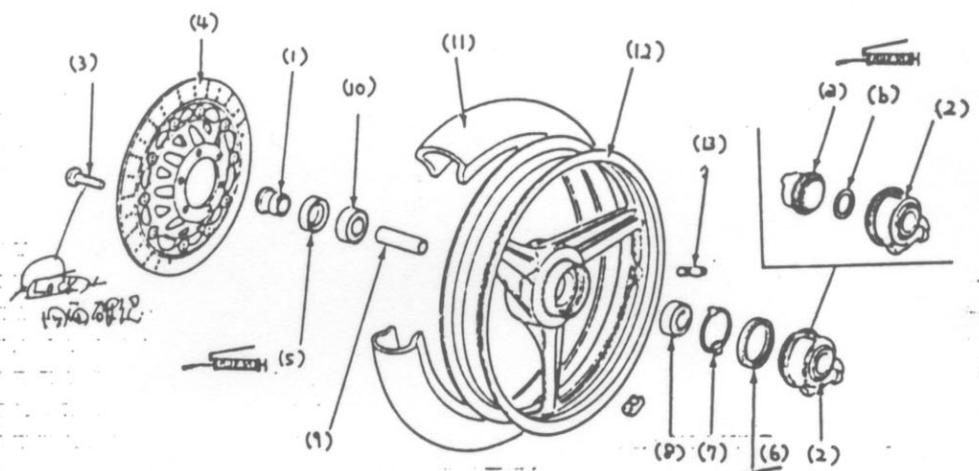

WARNING

Do not get grease on the brake disc, or stopping power will be reduced.

NOTE

- Replace the wheel bearings in pairs.
- Refer to the Common Service Manual, section 1 for wheel bearings replacement.
- Do not add more than 60 grams to the wheel balance weight.

Requisite Service 12-7
 • Front wheel removal (page 11-7)

Procedure		Q'ty	Remarks
(1)	Disassembly Order		
(2)	Side collar	1	
(2)	Speedometer gear box	1	
Speedometer gear box disassembly			
(a)	Speedometer gear	1	
(b)	Shim	1	
(3)	Brake disc mounting bolt	6	
(4)	Brake disc	1	
(5)	Right dust seal	1	
(6)	Left dust seal	1	
(7)	Speedometer gear retainer	1	
(8)	Left wheel bearing	1	
(9)	Distance collar	1	
(10)	Right wheel bearing	1	At installation: Drive a new right bearing into the hub first, then a new left bearing in.
(11)	Front tire	1	
(12)	Wheel rim	1	
(13)	Rim valve	1	