


# Body Panels

## Seat Removal/Installation

Turn the ignition key and release the seat locking.  
Remove the seat hook and remove the seat rearward.  
Installation is in the reverse order of removal.

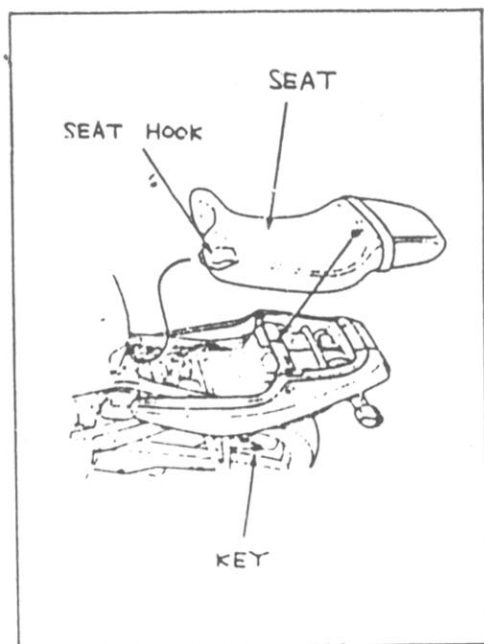

## Rear Cowl

Remove the seat.  
Remove the screws.  
Release the front bosses from the grommets.  
Remove the rear cowl rearward.

### CAUTION;

• At rear cowl removal/installation: do not damage the claw and the rear cowl groove.

At installation, position the claw into the rear cowl groove.  
Next, position the rear bosses into the rear grommets, then front bosses into the front grommets.

Tighten the screws.

