


Thermostat Removal/Installation

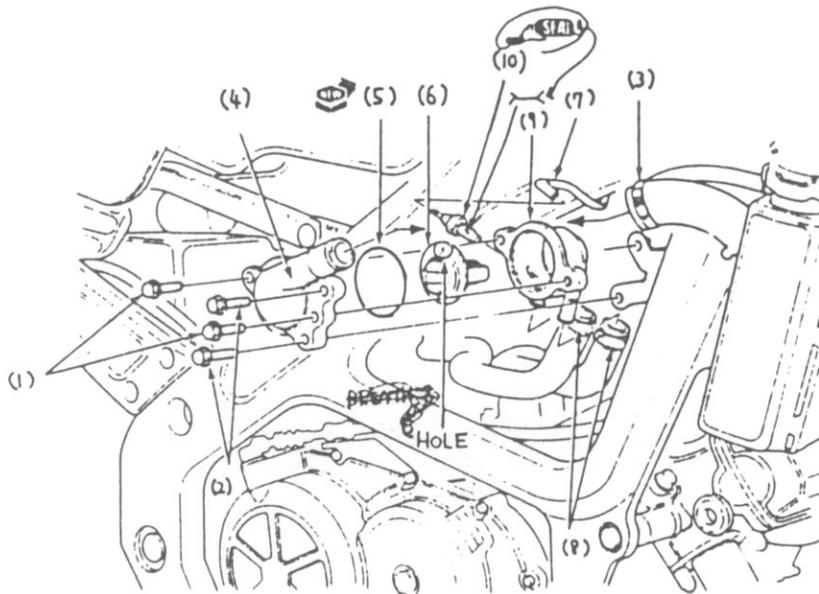

Requisite Service

5-3

• Coolant draining (page 4-8)

Procedure		Q'ty	Remarks
(1)	Thermostat housing cover bolt	2	Installation is in the reverse order of removal. Loosen. First remove the mounting bolts, then remove the cover bolts. Loosen the band screw and disconnect the radiator hose from the housing cover.
(2)	Housing mounting bolt	2	
(3)	Radiator hose	1	
(4)	Thermostat housing cover	1	
(5)	O-ring	1	
(6)	Thermostat	1	
(7)	Housing Assembly Removal		
(7)	Thermo sensor wire	1	Loosen the band screw and disconnect the water hose from the housing.
(8)	Water hose	2	
(9)	Thermostat housing	1	At installation: Clean and apply sealant to the thread.
(10)	Thermo sensor	1	