


Carburetor Removal/Installation

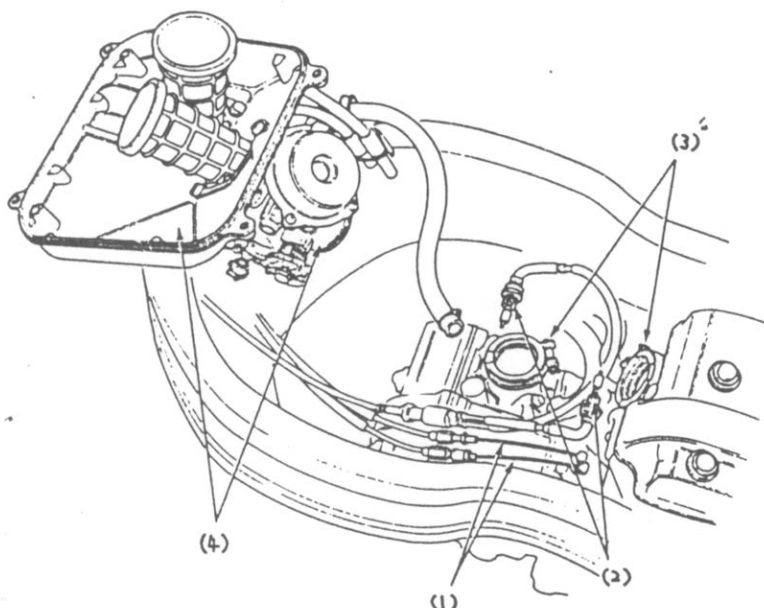

WARNING

• Gasoline is extremely flammable and is explosive under certain conditions.

• Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.

Requisite Service

6-2

• Air cleaner case removal (page 6-2)

Procedure		Q'ty	Remarks
(1)	Removal Order Throttle cable	2	Installation is in the reverse order of removal. Loosen the lock nut and disconnect the throttle cables from the throttle drum.
(2)	Choke cable	2	
(3)	Carburetor band screw	2	Loosen.
(4)	Carburetor/air chamber	1/1	